



BATTERY FAULT NOTICE:
PLEASE DO NOT USE THIS PRODUCT MAY OR
LEAVE IT FOR EXTENDED PERIOD OF TIME
WITH A LOW CHARGE, IF THE BATTERY FALLS
BELLOW 2% AND IS LEFT IN THAT POSITION
WE WILL NO LONGER ACCEPT A CHARGE.

cases are irreversible. If needed contact your local poison control center USA: AAPCC 1-800-222-1222.

Note that the MAX V3 PRO is not a medical device and is not intended to administer medicinal or legal substances of any kind, diagnosis, treatment or prevent any diseases or other conditions.

Any illegal use of this device could subject the user to criminal penalties and/or imprisonment under the law of their (and/or) jurisdictions.

THIS PRODUCT DOES NOT CONTAIN ANY BOTANICAL MATERIAL.

1 XMAX V3 PRO OVERVIEW

2 XMAX V3 PRO CONTENTS

SPECIFICATIONS

Battery Capacity: 18650 3.7V 2600mAh

Working Voltage: 3.2-4.2V

On/Off: Once the 3 times

Temperature Range: -10°~30°(14°~40°F)

Display Screen: OLED

Session Time: 4 minutes/6 minutes

Session Range: 2m

Holding Time: 30s

Size: 21.5*10.5*2.5cm (8.5*4.1*1in)

Weight: 100g

3 POWER ON/OFF

Click power button 3 times, the XMAX V3 PRO will be powered on and heat up

4

ON DEMAND Mode: Keep pressing the "Power button" to heat the device until it reaches the set temperature and ready for 3 minutes. The device will automatically turn off and auto suspend heating for 30s, please keep pressing the "Power button" to resume the use for an additional 30 seconds.

5 TEMPERATURE SETTINGS

Press or hold the "up" button to increase temperatures, press or hold the "down" button to decrease temperatures.

Click "up" to change by degree, "down" to change quickly.

Temperature Range: 10°~30°(50°~40°F)

6 TIMER SWITCHOVER

To switch to "ON DEMAND" mode, click the "up" button and "down" button simultaneously once.

The device will automatically power off after 30 seconds. Click the "up" and "down" button simultaneously once, then switch to "SESSION" mode.

7 OLED DISPLAY

To switch to "ON DEMAND" mode, click the "up" button and "down" button simultaneously once.

SESSION Mode: The screen indicates whether the mouthpiece, this device will automatically begin using.

8

8 MODE SWITCHOVER

To switch to "ON DEMAND" mode, click the "up" button and "down" button simultaneously once.

The device will automatically power off after 30 seconds. Click the "up" and "down" button simultaneously once, then switch to "SESSION" mode.

9

9

10 CLEANING & MAINTENANCE

Always keep the XMAX V3 PRO working optimally and clean the device regularly. We recommend that all parts which come in contact with material or vapor be cleaned regularly.

All removable parts can be disassembled for optimal cleaning.

Mouthpiece & Filter

Gently disassemble to remove it. It can be cleaned with soap and water.

Mouthpiece Tip

Cleanse & Path

Filter Component

11

remove it from the charger immediately. Do not remove any debris present. Contact our customer support@topgreeninc.com.

NOTE:

DON'T TOUCH THE HEATING ELEMENT IMMEDIATELY AFTER USE.

DON'T CLEAN THE WHOLE DEVICE WITH WATER OR SUMMER.

DON'T INJECT ANY LIQUID OR OIL INTO THE METAL PART.

MADE SURE TO DEACTIVATE THE DEVICE BY LOOKING, MAKE SURE IT HAS NOT BEEN USED FOR AT LEAST 30 SECONDS.

STELLE SICHER, DASS DU DAS GERÄT NICHT VERGEGENSTÄNDIGT HABEN. DAS GÄLT SICHERSTELLUNG DER GESETZLICHEN VORSCHRIFTEN UND VERHINDERT DAS EINTRÜBBEN DER LUFT.

SPRITZE KEINE FLÜSSIGKEIT ODER ÖL IN DIE METALLTEILE.

WARNING: HOT COMPONENTS

13

13 LIMITED WARRANTY

The product is warranted for a period of 12 months from purchase with or 12 months from the date of manufacture, whichever comes first. The warranty does not cover damage caused by accident, abuse, misuse, or negligence. The warranty does not cover damage caused by unauthorized modification or repair. Please contact customer service for help with any damaged unit.

DAMAGES

Immediately disassemble the use of product if damaged. Do not attempt to disassemble. Do not disassemble, puncture, cut, crush, shear circuit, increase or expose the metal to water. Please note that the device is designed for use of high quality materials and components only. Any of the XMAX V3 PRO parts or illegal substances will void the warranty.

This warranty covers only the electronic base, but not the mouthpiece, base, or any other part of the device. This warranty does not apply to damage caused by overheating, unusually restrictive airflow, overcleaning, or any other reason. Do not attempt to repair product by yourself. Please contact customer service for help with any damaged unit.

15

15 ACHTUNG: WICHTIGE SICHERHEITSHINWEISE ZU DEM AKKU

1. Laden Sie den Akku mit einem qualitativ hochwertigen und geeigneten Ladegerät auf. Verwenden Sie keinen Akku, der mit einer Spannung von mehr als 4.2V geladen wurde.

2. Wenn der Akku nicht benutzt, entfernen Sie die Akkubuchse und legen Sie den Akku in eine trockene, zerkleinerungskurzschluss-, zerschneidungsfestige und witterungsunempfindliche Umgebung ab.

3. Verwenden Sie nur den Originalakku, niemals Fälsch, Kopien oder andere Akkus.

4. Verwenden Sie keine beschädigten Batterien, einschließlich gebrochener, kleiner Riss oder eine Verkippung kann gefährlich werden.

Die Nutzung dieser Anweisungen kann zu schweren oder lebensgefährlichen Schäden führen. Bitte beachten Sie auf Verletzungen verursachen oder zu einem Brand, Feuer, Rauch, Fehlgebrauch, Missbrauch, falsches Aufhängen, Nichtbeachtung der Konstruktion.

5. Verwenden Sie das Gerät nicht von der Garantie abgesehen. Normale Leistungseinschränkungen von Akkus ist abhängig von der Temperatur und dem Ladestand.

Um einen Garantieanspruch zu erhalten, kontaktieren bitte unseren Kundenservice unter support@topgreeninc.com. Der

19

19

plastic parts.

Normal product wear and tear is not covered under warranty. Normal performance degradation of batteries is not covered by the warranty.

To make a warranty claim, please contact customer support@topgreeninc.com. The original bill of sale, authenticity code, pictures or videos, and any serial numbers are required to redeem the warranty.

At the manufacturer's discretion, warranty service will be provided for repair of the product, or for exchange of the product and/or part with a new or functionally equivalent product/part.

your responsibility to understand the dangers as well as the correct procedure for handling batteries. Do not store or move batteries in containers that pose a fire or environmental hazard.

Please recycle or dispose according to local safety regulations law. (Suggested to cover items with proper insulating tape before disposal).

14

14 SAFETY

Prior to your use, please read and fully understand the instructions including the safety information. If you do not understand these instructions be kept for future reference. Failure to follow warnings may result in a safety hazard including but not limited to bodily injury or death.

AGB

You must be at least 18 years of age to purchase or use the XMAX V3 PRO for adult use only.

USE

Never use the product before reading the manual in its entirety, as the section on topic is unclear prior to use, please contact customer service for clarification.

This product should not be used by children, seniors, pregnant women or breast feeding or those with life threatening illnesses without first consulting a doctor or a registered nurse. The user must be at least 18 years of age to purchase or use the XMAX V3 PRO for adult use only.

WARNING: THIS PRODUCT IS NOT INTENDED FOR NICOTINE, PRODUCT IS DESIGNED FOR LEGAL BOTANICALS AND CONCENTRATES. THIS PRODUCT DOES NOT CONTAIN ANY BOTANICALS OR CONCENTRATE MATERIALS. KEEP DEVICE AWAY FROM CHILDREN AND PETS.

16

16 YOUR RESPONSIBILITY TO UNDERSTAND THE DANGERS AS WELL AS THE CORRECT PROCEDURE FOR HANDLING BATTERIES. DO NOT STORE OR MOVE BATTERIES IN CONTAINERS THAT POSE A FIRE OR ENVIRONMENTAL HAZARD.

PLASTIC PARTS

Normal product wear and tear is not covered under warranty. Normal performance degradation of batteries is not covered by the warranty.

To make a warranty claim, please contact customer support@topgreeninc.com. The original bill of sale, authenticity code, pictures or videos, and any serial numbers are required to redeem the warranty.

At the manufacturer's discretion, warranty service will be provided for repair of the product, or for exchange of the product and/or part with a new or functionally equivalent product/part.

18

18

DISCLAIMER

Thank you for choosing the XMAX V3 PRO. To ensure safe experience, please read and understand the instructions fully before your first use of the XMAX V3 PRO. We strongly recommend that you read these instructions for future reference.

We hope you enjoy the excellent quality and performance of this new XMAX V3 PRO. Upon purchase, you have the right to withdraw from the purchase contract for a period of 14 days from the day following the delivery of the product. If you exercise this right, you must return the product in its original condition and in full compliance with the relevant legislation.

California Prop 65 WARNING: This product contains chemicals known by the state of California to cause cancer or birth defects or other reproductive harm. The product may contain a mixture of chemicals known to cause respiratory or other diseases and in some

cases are irreversible. If needed contact your local poison control center USA: AAPCC 1-800-222-1222.

Note that the XMAX V3 PRO is not a medical device and is not intended to administer medicinal or legal substances of any kind, diagnosis, treatment or prevent any diseases or other conditions.

Any illegal use of this device could subject the user to criminal penalties and/or imprisonment under the law of their (and/or) jurisdictions.

THIS PRODUCT DOES NOT CONTAIN ANY BOTANICAL MATERIAL.

1 XMAX V3 PRO OVERVIEW

2 XMAX V3 PRO UBERSICHT

3 XMAX V3 PRO INHALT

4 XMAX V3 PRO SPEZIFIKATIONEN

Akkukapazität:	18650 3.7V 2600mAh
Leistungsspannung:	3.4-4.2V
Temperaturbereich:	-10°~30°C (-14°~86°F)
Display:	Monochrom 1,3" TFT
Temperaturbereich:	10°~40°C (50°~104°F)
Obermaterial:	Metall
Abmessungen:	21.5*10.5*2.5cm (8.5*4.1*1in)
Netzgewicht:	100g
Wasserfestigkeit:	IPX7
Staubdichte:	IP67
Autonomie:	4 Minuten/6 Minuten
Reinigung:	Waschen mit Wasser

5 XMAX V3 PRO SPEZIFIKATIONEN

6 XMAX V3 PRO SPEZIFIKATIONEN

7 XMAX V3 PRO SPEZIFIKATIONEN

8 XMAX V3 PRO SPEZIFIKATIONEN

9 XMAX V3 PRO SPEZIFIKATIONEN

10 XMAX V3 PRO SPEZIFIKATIONEN

11 XMAX V3 PRO SPEZIFIKATIONEN

12 XMAX V3 PRO SPEZIFIKATIONEN

13 XMAX V3 PRO SPEZIFIKATIONEN

14 XMAX V3 PRO SPEZIFIKATIONEN

15 XMAX V3 PRO SPEZIFIKATIONEN

16 XMAX V3 PRO SPEZIFIKATIONEN

17 XMAX V3 PRO SPEZIFIKATIONEN

18 XMAX V3 PRO SPEZIFIKATIONEN

19 XMAX V3 PRO SPEZIFIKATIONEN

20 XMAX V3 PRO SPEZIFIKATIONEN

21 XMAX V3 PRO SPEZIFIKATIONEN

22 XMAX V3 PRO SPEZIFIKATIONEN

23 XMAX V3 PRO SPEZIFIKATIONEN

24 XMAX V3 PRO SPEZIFIKATIONEN

25 XMAX V3 PRO SPEZIFIKATIONEN

26 XMAX V3 PRO SPEZIFIKATIONEN

27 XMAX V3 PRO SPEZIFIKATIONEN

28 XMAX V3 PRO SPEZIFIKATIONEN

29 XMAX V3 PRO SPEZIFIKATIONEN

30 XMAX V3 PRO SPEZIFIKATIONEN

31 XMAX V3 PRO SPEZIFIKATIONEN